

ihelp for the Ice cream trikes

To turn the freezer On, first we have to take out the water container from the compartment to get access to the switch.



Make sure all the wires from the battery are connected. There are two switches. The top one is for the water pump to get water from the container to the sink; the bottom switch is for the freezer.







When we turn the freezer switch on, the panel controls turn on so we can setup our freezer with the desired temperature. Also we can set on low, medium and high speed. The freezer have one more option: you can use it on high or on economic efficiency mode to save the power of the battery. The panel shows the voltage of the battery indicator so you know when you need to charge the battery. Charge the battery!





To operate the trike we have to make sure the battery is connected properly to the tricycle.

Turn the battery On to see if the battery has power to operate the trike. Charge the battery!





In order To turn the back light on, press the button on the side of the battery. There are multiple options; such as flash lights or steady lights etc...





To operate the trike, we have the power button on the display controller which has to be pressed for 3-5 seconds to turn on the display.

For motor operation, we have to select PAS 0 like you see on the screen, and push the throttle (make sure the brake are off) To shut off the trike push the power button for 3-5 seconds.





